

PROGRAMING THE YAESU FT-2800

Turn radio on using the orange POWER button.

Push the D/Mrso the display shows VFO in the lower right.

Using the keypad on the microphone, key in the frequency you wish to receive on. You may also use the main tuning knob to do this.

If you wish a different repeater offset than what is shown, or if you want SIMPLEX and the display shows a shift, push “A” on the microphone keypad. Rotate the dial to #21, which is RPTR. Push the “A” button again and rotate the main dial to your choice. Once selected, push the “A” button again. Key and release the microphone PTT button quickly to store the information.

If a PL tone is necessary, push the “A” button on the microphone and rotate the main dial to #28, SQ TYP. Push the “A” button and rotate the main dial until T ENC appears. Push the “A” button and then key and release the microphone PTT button quickly to lock in the selection.

To enter the proper PL tone frequency, push the “A” button and rotate the main dial to #27, SQ TNF. Push the “A” button, then rotate the main dial to the desired PL tone frequency. Push the “A” button so SQ TNF appears. Push and release the microphone PTT button quickly to lock in the selection.

To lock the information into a memory channel, push and hold the D/MR button on the radio until a channel number begins to flash on the right side of the display. QUICKLY rotate the main dial to the desired memory channel where you want to store the information. Again, push the D/MR and the information is stored in the selected channel. To recall the memory channels, push the D/MR button until MR and channel numbers appear on the right of the display.