Quick Start Programming...

Yaesu FT-60R

- 1. Turn radio ON.
- 2. Press [V/M] key to go to VFO mode.
- 3. Use numeric keypad to enter desired frequency.
- 4. Press [F] key then [SQUELCH TYPE/1] key.
- 5. Use tuning knob to select squelch type.
- 6. Press [F] key to set squelch type.
- 7. Press [F] key then [CODE/2] key.
- 8. Use tuning knob to select CTCSS tone or DCS.
- 9. Press [F] key to set tone.
- 10. Press [F] key for over one second the next available memory location will start blinking in the display.
- 11. Touch [F] key to enter what you have just programmed into that memory location.

Painless...especially when you have Auto Repeater Shift set!

Want to add an alphanumeric label to that memory entry?

- a. In Memory mode (not VFO mode), select desired channel w/channel knob.
- b. Press [F] key then [SET/0] key to enter Set Menu.
- c. Use tuning dial to go to Item 27 NAME.
- d. Press [F] key and use tuning dial to choose ALPHA.
- e. Press [F] key to set what you just chose.
- f. Press [F] key then [SET/0] key to enter Set Menu.
- g. Use tuning dial to go to Item 28 NAME WRITE.
- h. Press [F] key once...then one more time to make first digit blink.
- i. Use tuning knob to select desired alphanumeric character.
- j. Press [F] key to set and move to next character.
- k. Repeat i-j above for up to six characters.
- 1. When pressing [F] key after entering sixth character, a long beep will be heard.
- m. Touch PTT key to exit Set Mode and go back to Memory Mode.

Courtesy of Clint Bradford, K6LCS www.k6lcs.com