

Yaesu VX-170 Programming Steps

1. To LOCK the dial, Press the "6" Key and hold it for 1 second.
2. To program, press the VFO key "# " second from right bottom row A or B will appear.
3. Enter digits from keypad beginning with second digit (First "1" is assumed)
4. Set transmit power by pushing F key momentarily then push "3" Low key and turn knob to desired level which is read on LCD screen. **Press PTT key briefly to exit Function mode.**
5. Set Offset by pushing F then 4 RPT key and rotate bottom dial to +, - or off for simplex.
6. Set PL Tone by pushing F key then 2 TONE key and rotate bottom dial to desired frequency.
7. While in VFO mode after programming PL, Shift, Power, press and Hold F key for 1-2 seconds until memory number blinks.
8. Rotate bottom dial until desired memory location reached, then hold in F key "memory in" appears with beep .
9. Press PTT key briefly which returns radio to VFO mode.
10. To access menus momentarily press F key followed by momentarily 0 SET key; rotate knob to desired menu then momentarily to see values, rotate knob to change value, press F key momentarily and then push PTT key to return exit Function mode.
11. Press and Hold "1" key to toggle between Weather channels and other channels.
12. **To move memory data to VFO, select memory location , press MR key momentarily then press and hold VFO key to save memory data to VFO.**